


# Water Sample Collection System

2000 mL water sampler for discreet and composite collections.

Comparable to the Lab-Line Water Sampler which is no longer available on the market.

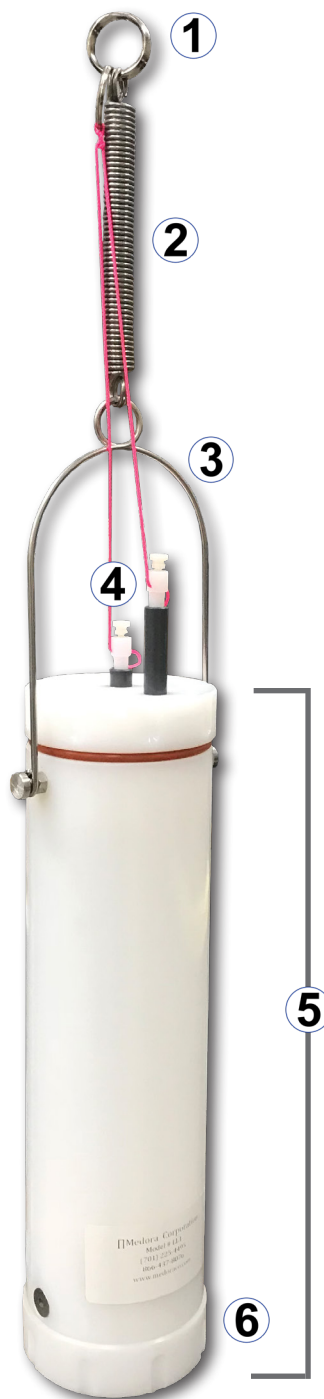

## Construction

Ultra-high-molecular-weight polyethylene (UHMW), PVC, and stainless steel hardware.

1. Rope attachment point
2. Spring action opener
3. Handle
4. Seated plugs
5. Main body & lid (UHMW)
6. Isolated stainless steel weighted base

## Dimensions

Main Body Including Lid: 17.0" H, 4.5" Dia.

Internal Sample Containment: 10.75" H, 4.0 Dia.

## Discreet Sample Deployment

Insert seated plugs and lower to desired depth. To open the sampler, give the attachment rope a good tug to engage the spring action. The seated plugs will pop out and sampling will commence.

## Composite Sample Deployment

**From surface:** Remove seated plugs and lower through water column.

**From given point in the water column:** Deploy as if a discreet sample. Once at the desired starting depth, open sampler and then begin to lower through water column.

Medora Corporation | GridBee® SolarBee®

www.medoraco.com | 866 - 437 - 8076 | info@medoraco.com